MURPHY BED ASSEMBLY INSTRUCTIONS FOR

Horizontal or 'side mount' Murphy Bed (HZ)

PREPARATIONS FOR INSTALLATION

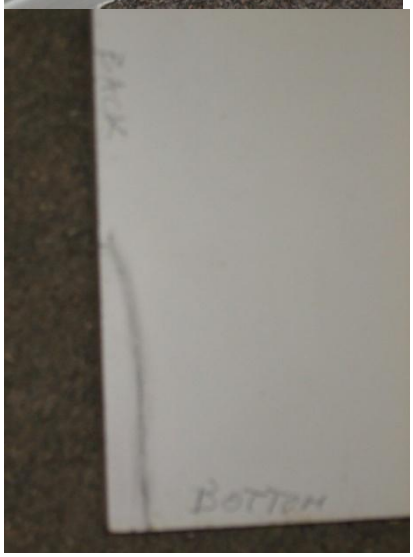

1. Before starting decide whether the cabinet is to be installed in front of the baseboard or whether the side panels are to be cut to accommodate the baseboard so that the panels rest flush with the wall.

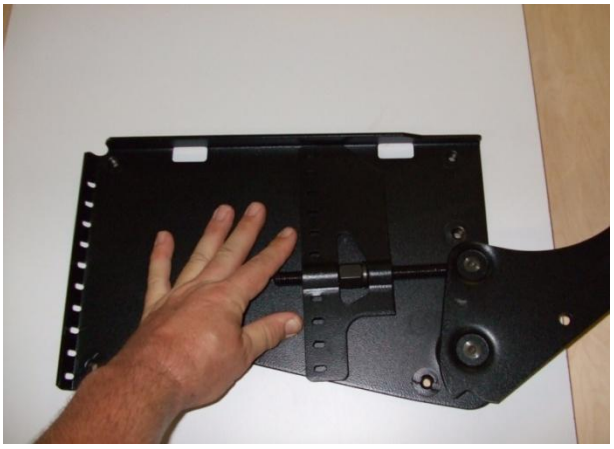

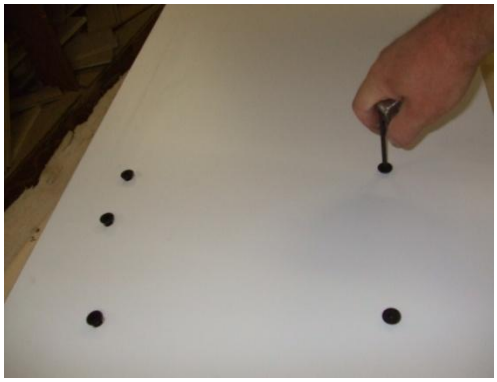

2. Lay the side panels down, push the mechanisms into the pre-drilled holes and insert the countersunk bolts from the back of the panel. Tighten the bolts with an allen wrench until the face of the bolts is flush with the surface of the panel.

Horizontal bed cabinet assembly

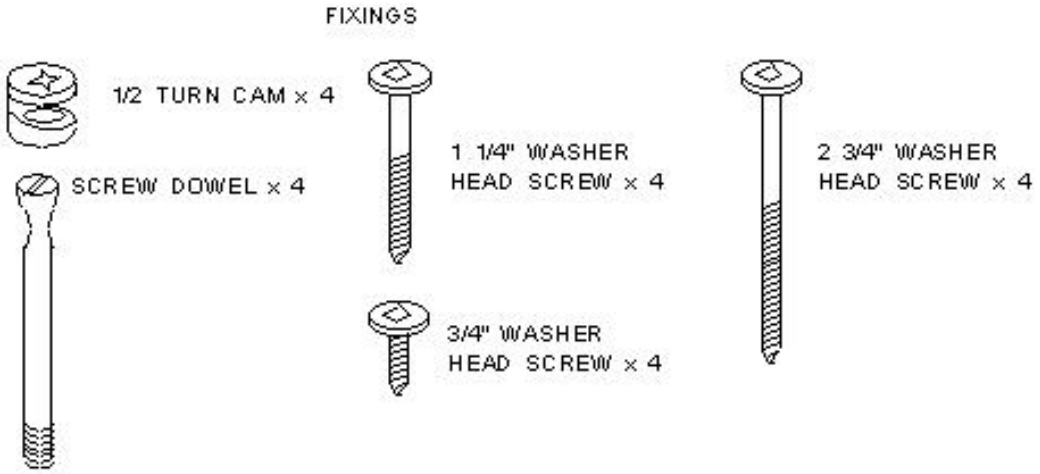

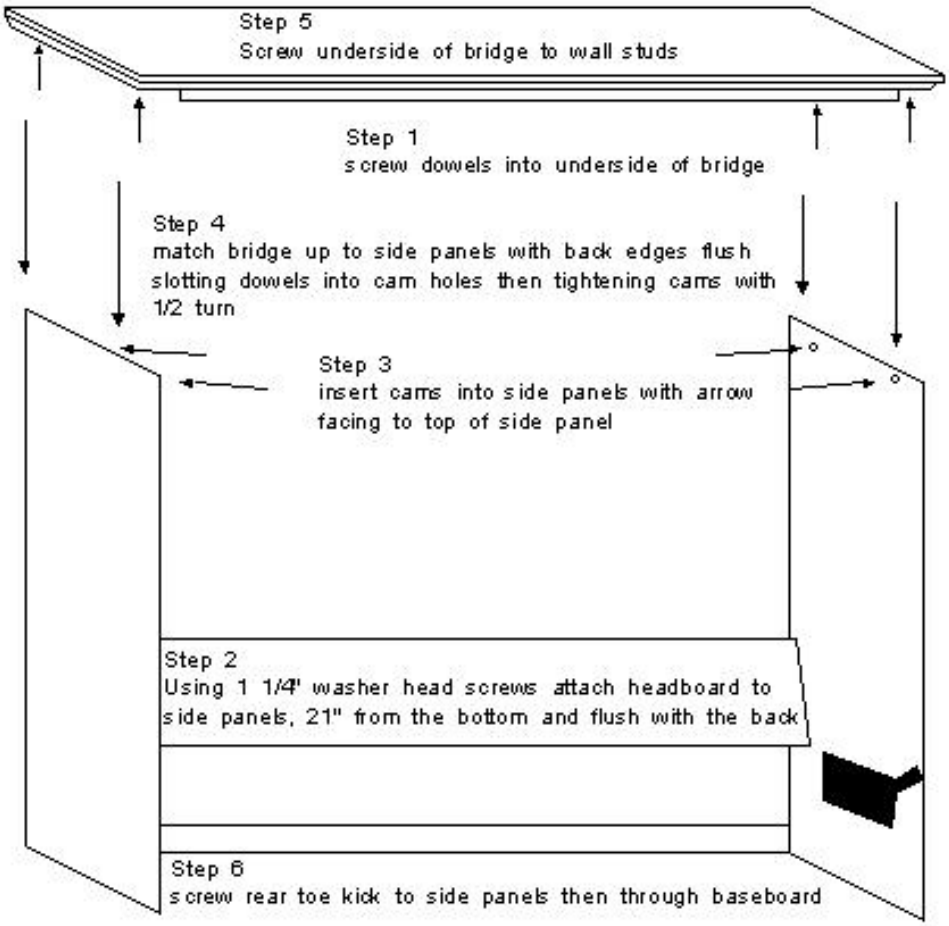

USA Murphy Beds Assembly - loading springs & bed platform

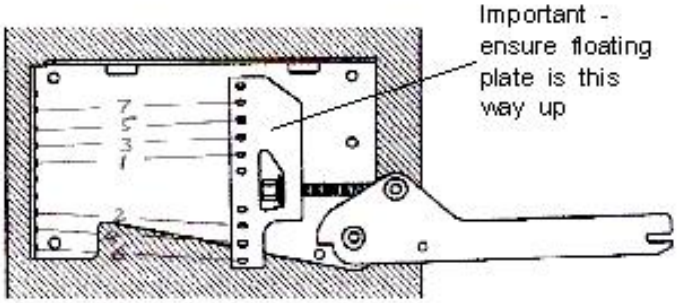

Load the springs in the positions shown in order (if 8 springs are needed the final one will go above spring 2)

1. Load the required number of springs by hooking them into the back of the fixed plate then into the floating plate from the back. The following spring quantities are recommended:

VERTICAL BEDS
King: 9 springs
Queen with table: 8 springs
Full with table or queen: 7 springs
Twin with table or full: 6 springs
Twin: 5 springs

HORIZONTAL BEDS
Queen: 4 springs
Full: 3 springs
Twin: 2 springs

2. LOAD BED PLATFORM

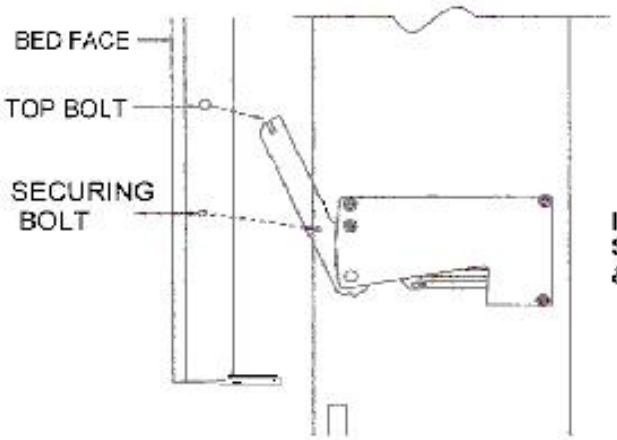

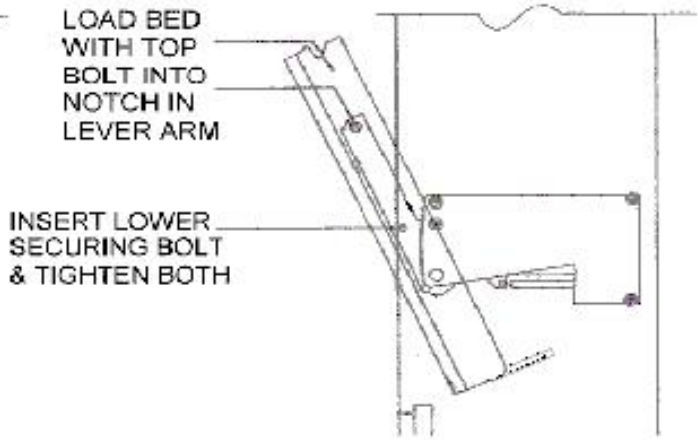

3. Attach the metal legs with the nuts and washers supplied and join with the connecting rod

4. Screw mattress support panels onto the platform so that the elastic straps are across each corner at the foot end of the bed

5. Tighten both mechanism adjustment nuts with a 3/4" wrench until only 1/2" to 3/4" of the connecting bolt is showing between the lever and the floasting plate. The bed will not close until this is done.

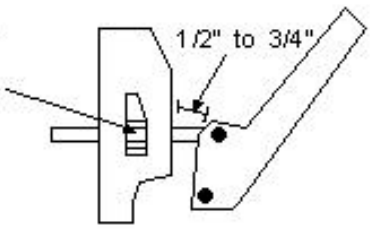

6. Place steel cover plates over mechanisms and secure loosely with 1 1/2" screws. Attach front toekick about 2" back from the front edge of the sides using 3/4" screws and 'L' brackets behind the toekick